


*Existing gravel layer

*Existing Suitable Built-Up Roof System

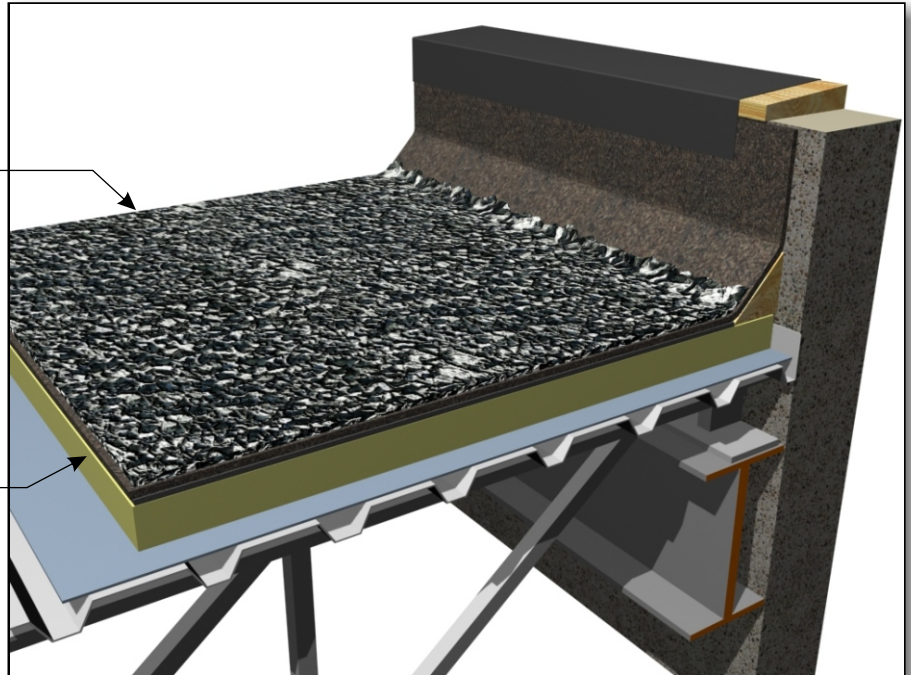

BUILT-UP ROOF SYSTEM BEFORE COOLFLEX APPLICATION

*Metal cap flashing

Step 54 COOLFLEX 2nd. Layer (Finished Coat)


Step 3, COOLFLEX 1st. layer

Step 2, *Asphalt Pour (Flood Coat)

Step 1, *Removal of existing gravel layer and vacuum clean up

*Existing Suitable Built-Up Roof System

(* by others)

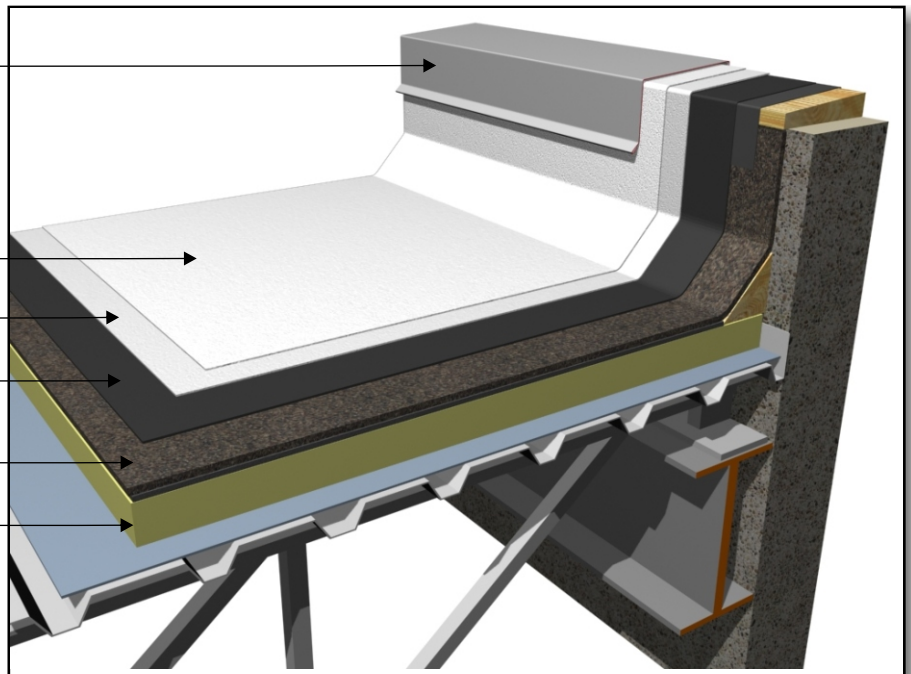

BUILT-UP ROOF SYSTEM AFTER COOLFLEX APPLICATION